

Thank you for purchasing the **SwiftShiftTM Short Shifter System**. This kit is spesifiaclly designed to reduce shift throw distance, reduce shifter free play, and strengthin the OEM shifter linkage system. The No Slack Needle Bearing Kit can be used to relpace the broken or worn OEM plastic shift lever bushings and will eliminate shift lever free play. Be sure to have the the following tools and supplies required before starting installation. These kits are preadjusted; however, some cars may require a minor shift cable length adjustment. Installation should take about one to two hours of time. For technical information or for more great products please contact us at **480-317-9911** or on the web at www.evoms.com, thank you.

This kit is designed exclusively for the following Porsche® cars:

Models:

GT3-6SPD 996TT-6SPD 996-6SPD

986-5SPD 986-6SPD 986S-6SPD

REQUIRED TOOLS AND SUPPLIES NEEDED FOR INSTALLATION:

Lock-tite Utility Knife (*NSNB ONLY*) Snap-ring pliers

10mm socket/ratchet Torx screwdriver set 2mm Hex key





"SwiftShift" Installation Instructions

Installation tip: We have found it easier to perform this installation from the passenger seat.

- 1. Remove the center console. (Diagram 1) will show all the hidden screws and clips.
- 2. Unclip the right side shift cable bushing from the shift tower assembly buy removing the brass clip and squeezing the black clips together firmly. If you have the No Slack Needle Bearing kit, also remove the driver side **blue cable's** bushing. (Diagram 1, Illustration #5)
- 3. Remove the green plastic plate located on the shift tower. (Not present on all cars.)
- 4. Unbolt the 4 (10MM) perimeter nuts that hold the shift tower in place and tilt the shift housing.
- 5. Pry off the right side shift cable off the shift lever. (Picture 1)
- 6. Remove the right side black plastic shift cable end from the shift cable. (Picture 2)
- 7. For those of you who have the No Slack Needle bearing Kit, please skip to the supplemental set of instructions for needle bearing installation.
- 8. Install the shift lever extension by placing it over the end of the shift lever. Tap the end to assure it is in the proper place. NOTE: THE SETSCREW MUST SEAT BEHIND THE ORIGINAL SHIFT BALL. WE RECOMMEND THAT LOC-TITE BE USED ON THE SETSCREW. (Picture 3)
- 9. Next, place the new pre adjusted "SwiftShift" cable end on the cable. Notice the piece has three additional holes and an additional setscrew for easier installation. WE RECOMMEND THAT LOC-TITE BE USED ON THE SETSCREWS. (Picture 4)
- 10. Remount and reassemble the shift tower and check all connections.
- 11. Test the shifter before the console is completely reassembled. NOTE: THE SHIFTER MAY FEEL MUCH CRISPER AT FIRST. If the car has trouble shifting into any forward gears, you may need to adjust the cable end length. This is done by backing off the locking nut and screwing or unscrewing the supplied cable end until the right length is found. Then retighten the locking nut. If reverse is having trouble going into gear, adjust the cable end length on the blue cable. Pull the spring back and adjust length as needed. Call us at the shop with any questions you have. 480-317-9911











Needle Bearing Installation Instructions

Please note that the OEM shift tower assembly is composed of many fragile plastic pieces. Some of these plastic pieces we will eliminate with this kit and others will have to be reinstalled. Care needs to be taken when removing and reinstalling these pieces.

- 1. Carefully remove the black pushpin clip on the blue cable's end. (Figure 1)
- 2. Detach the driver side cable end. (Figure 2)
- 3. Make sure the cable bushings and cables are detached from the shift tower. (Figure 3)
- 4. Remove the shift tower for the next step. (Figure 4)



Figure 1





Figure 2



Figure 4



(Continue) **Needle Bearing Installation Instructions**

- 5. Find a suitable table and a utility knife. On both sides, cut the white snap clips holding the OEM plastic bushings in place. (Figure 5)
- 6. Pry out both of the OEM bushings from the shift tower and discard. (Figure 6)
- 7. Insert the snap rings on both sides of the shift lever. (Figure 7)
- 8. Insert the needle bearing bushings on both sides. Note the needle bearing bushings are slotted the same contour as the shift tower. Secure the bushings with the large snap rings supplied.
- 9. Make sure the shifter is operating smoothly and place it back in the car.
- 10. Proceed to step #9 on the first sheet instructions.



Figure 5



Figure 7

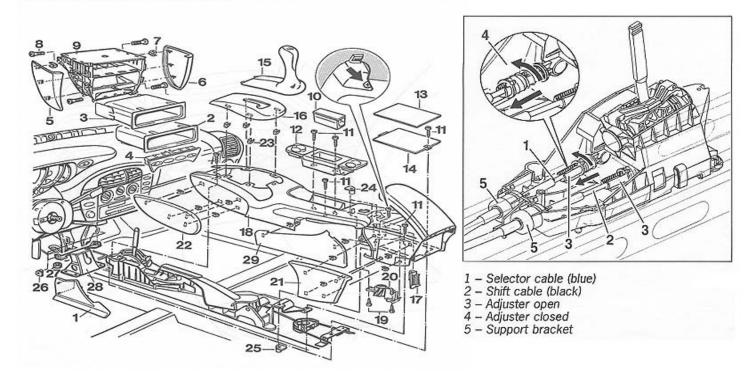


Figure 6



Figure 8

Removing and installing centre console



Removing and installing centre console									
No.	Designation	Qty.	Note	: Installation	No.	Designation	Qty.	Removal Note	Installation
1	Side cover	1	Unclip	Clip in	17	Locking device	1	Unclip, and unscrew the	
2	Oddments tray	1	Pull out	Insert		A 202 CO.		Torx screw beneath it.	
3	Oddments tray	1	Pull out	Insert	18	Centre console, centre	1	Undo Torx screws (Item 11) 5.0x16 and	Plug in the centre console, centre, electrical
4	Front trim	1	Insert a plastic spatula at the side and press out.	Insert				disconnect electrical plug connection from the lock barrel.	plug connection to the lock barrel, position the centre
5	Cover, front right	1	Unclip	Clip in				bairei.	console and tighten Torx
6	Cover, front left	1	Unclip	Clip in					screws (Item 11) 5.0x16.
7	Clip	6		Inspect and replace if necessary.	19	Torx screw 3.5x14	3	Undo from the lock barrel (Item 20).	Tighten Torx screws 3.5x14 with the lock barrel (Item 20).
8	Torx screw	4			20	Lock barrel	1		
9	Centre console, front	1			21	Cover, rear left	1	Unclip	Clip in
10	Container insert	1	Pull off	Press in	22	Cover, front left	1	Unclip	Clip in
11	Torx screw 5.0x16	7	Undo		23	Clip	26	0.000	Inspect and replace if
12	Retaining bracket	1	Unclip and disconnect	Connect electrical plug		EURA			necessary.
			electrical plug connections	connections at retaining bracket, fix into the centre console and	24	Plug-in nut 3.5x2.5x5	5		Inspect and replace if necessary.
				fasten with Torx screws (item 11).	25	Plug-in nut 5.0x3.5x8	4		Inspect and replace if necessary.
13	Rubber insert	1			26	Plug-in nut 3.5x2.5x5	- 4		Inspect and replace if necessary.
14	Cover	1		Push in cover and fasten with Torx screw	27	Collar nut	4		
				(Item 11) 5.0x16.	28	Holder	1		
15	Shift lever knob	1	Pull off	Push on	29	Cover, centre left	1	Unclip	Clip in
16	Cover	1	Unclip	Fix and clip in					

Please Note: The number 17 fastener is difficult to find. Unclip the change holder and there is a hidden screw beneath it.